Acer Projector

P5206/N216/PN-X14/S5201/T111/PS-X11/S5201B/T111E/PS-X11K/ S5301WB/T121E/PS-W11K Series User's Guide

Downloaded From projector-manual.com Acer Manuals

Copyright © 2010. Acer Incorporated.
All Rights Reserved.

Acer Projector P5206/N216/PN-X14/S5201/T111/PS-X11/S5201B/T111E/PS-X11K/S5301WB/T121E/PS-W11K Series User's Guide
Original Issue: 12/2010

Changes may be made periodically to the information in this publication without obligation to notify any person of such revisions or changes. Such changes will be incorporated in new editions of this manual or supplementary documents and publications. This company makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims the implied warranties of merchantability or fitness for a particular purpose.

Record the model number, serial number, purchase date and place of purchase information in the space provided below. The serial number and model number are recorded on the label affixed to your projector. All correspondence concerning your unit should include the serial number, model number and purchase information.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronically, mechanically, by photocopy, recording or otherwise, without the prior written permission of Acer Incorporated.

Acer Projector P5206/N216/PN-X14/S5201/T111/PS-X11/S5201B/T111E/PS-X11K/S5301WB/T121E/PS-W11K Series

Model number: _____

Serial number: _____

Date of purchase: _____

Place of purchase: _____

Acer and the Acer logo are registered trademarks of Acer Incorporated. Other companies' product names or trademarks are used herein for identification purposes only and belong to their respective companies.

"HDMI™, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC."

Downloaded From projector-manual.com Acer Manuals

Information for Your Safety and Comfort

Read these instructions carefully. Keep this document for future reference. Follow all warnings and instructions marked on the product.

Turning the product off before cleaning

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

Caution for plug as disconnecting device

Observe the following guidelines when connecting and disconnecting power to the external power supply unit:

- Install the power supply unit before connecting the power cord to the AC power outlet.
- Unplug the power cord before removing the power supply unit from the projector.
- If the system has multiple sources of power, disconnect power from the system by unplugging all power cords from the power supplies.

Caution for Accessibility

Be sure that the power outlet you plug the power cord into is easily accessible and located as close to the equipment operator as possible. When you need to disconnect power to the equipment, be sure to unplug the power cord from the electrical outlet.

Warnings!

- Do not use this product near water.
- Do not place this product on an unstable cart, stand or table. If the product falls, it could be seriously damaged.
- Slots and openings are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface.

This product should never be placed near or over a radiator or heat register, or in a built-in installation unless proper ventilation is provided.

- Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind onto or into the product.

Downloaded From projector-manual.com Acer Manuals

- To avoid damage of internal components and to prevent battery leakage, do not place the product on a vibrating surface.
- Never use it under sporting, exercising, or any vibrating environment which will probably cause unexpected short current or damage rotor devices, lamp.

Using electrical power

- This product should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- Do not allow anything to rest on the power cord. Do not locate this product where people will walk on the cord.
- If an extension cord is used with this product, make sure that the total ampere rating of the equipment plugged into the extension cord does not exceed the extension cord ampere rating. Also, make sure that the total rating of all products plugged into the wall outlet does not exceed the fuse rating.
- Do not overload a power outlet, strip or receptacle by plugging in too many devices. The overall system load must not exceed 80% of the branch circuit rating. If power strips are used, the load should not exceed 80% of the power strip's input rating.
- This product's AC adapter is equipped with a three-wire grounded plug. The plug only fits in a grounded power outlet. Make sure the power outlet is properly grounded before inserting the AC adapter plug. Do not insert the plug into a non-grounded power outlet. Contact your electrician for details.

Warning! The grounding pin is a safety feature. Using a power outlet that is not properly grounded may result in electric shock and/or injury.

Note: The grounding pin also provides good protection from unexpected noise produced by other nearby electrical devices that may interfere with the performance of this product.

- Use the product only with the supplied power supply cord set. If you need to replace the power cord set, make sure that the new power cord meets the following requirements: detachable type, UL listed/CSA certified, VDE approved or its equivalent, 4.6 meters (15 feet) maximum length.

Downloaded From projector-manual.com Acer Manuals

Product servicing

Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel.

Unplug this product from the wall outlet and refer servicing to qualified service personnel when:

- the power cord or plug is damaged, cut or frayed
- liquid was spilled into the product
- the product was exposed to rain or water
- the product has been dropped or the case has been damaged
- the product exhibits a distinct change in performance, indicating a need for service
- the product does not operate normally after following the operating instructions

Note: Adjust only those controls that are covered by the operating instructions, since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal condition.

Warning! For safety reasons, do not use non-compliant parts when adding or changing components. Consult your reseller for purchase options.

Your device and its enhancements may contain small parts. Keep them out of the reach of small children.

Additional safety information

- Do not look into the projector's lens when the lamp is on. The bright light may hurt your eyes.
- Turn on the projector first and then signal sources.
- Do not place the product in the following environments:
  - Space that is poorly ventilated or confined. At least 50cm clearance from walls and free flow of air around the projector are necessary.
  - Locations where temperatures may become excessively high, such as inside of a car with all windows rolled up.
  - Locations where excessive humidity, dust, or cigarette smoke may contaminate optical components, shorten the life span and darken the image.
  - Locations near fire alarms.
  - Locations with an ambient temperature above 40 °C/104 °F.
  - Locations where the altitudes are higher than 10000 feet.
- Unplug immediately if there is something wrong with your projector. Do not operate if smoke, strange noise or odor comes out of your projector. It

Downloaded From projector-manual.com Acer Manuals

might cause fire or electric shock. In this case, unplug immediately and contact your dealer.

- Do not keep using this product to break or drop it. In this case contact your dealer for inspection.
- Do not face the projector lens to the sun. It can lead to fire.
- When switching the projector off, please ensure the projector completes its cooling cycle before disconnecting power.
- Do not frequently turn off the main power abruptly or unplug the projector during operation. The best way is to wait for the fan to stop before turning main power off.
- Do not touch the air outlet grille and bottom plate which become hot.
- Clean the air filter frequently. The temperature inside may rise and cause damage when the filter/ventilation slots are clogged with dirt or dust.
- Do not look into the air outlet grille when projector is operating. It may hurt your eyes.
- Always open the lens shutter or remove the lens cap when the projector is on.
- Do not block the projector lens with any object when the projector is under operation as this could cause the object to become heated and deformed or even cause a fire. To temporarily turn off the lamp, press HIDE on the remote control.
- The lamp becomes extremely hot during operation. Allow the projector to cool for approximately 45 minutes prior to removing the lamp assembly for replacement.
- Do not operate lamps beyond the rated lamp life. It could cause it to break on rare occasions.
- Never replace the lamp assembly or any electronic components unless the projector is unplugged.
- The product will detect the life of the lamp itself. Please be sure to change the lamp when warning messages display.
- When changing the lamp, please allow the projector to cool down, and follow all changing instructions.
- Reset the "Lamp Hour Reset" function from the Onscreen Display "Management" menu after replacing the lamp module.
- Do not attempt to disassemble this projector. There are dangerous high voltages inside which may hurt you. The only user serviceable part is the lamp which has its own removable cover. Refer servicing only to suitable qualified professional service personnel.
- Do not stand the projector on end vertically. It may cause the projector to fall over, causing injury or damage.
- This product is capable of displaying inverted images for ceiling mount installation. Only use acer ceiling mount kit for mounting the projector and ensure it is securely installed.

Downloaded From projector-manual.com Acer Manuals

Caution for Listening

To protect your hearing, follow these instructions.

- Increase the volume gradually until you can hear clearly and comfortably.
- Do not increase the volume level after your ears have adjusted.
- Do not listen to music at high volumes for extended periods.
- Do not increase the volume to block out noisy surroundings.
- Decrease the volume if you can't hear people speaking near you.

Disposal instructions

Do not throw this electronic device into the trash when discarding. To minimize pollution and ensure utmost protection of the global environment, please recycle. For more information on the Waste from Electrical and Electronics Equipment (WEEE) regulations, visit http://www.acer-group.com/public/Sustainability/sustainability01.htm

Mercury advisory

For projectors or electronic products containing an LCD/CRT monitor or display:

"Lamp(s) contain Mercury, Dispose Properly."

Lamp(s) inside this product contain mercury and must be recycled or disposed of according to local, state or federal laws. For more information, contact the Electronic Industries Alliance at www.eiae.org. For lamp-specific disposal information, check www.lamprecycle.org

Downloaded From projector-manual.com Acer Manuals

First Thing First

Usage Notes

Do:

- Turn off the product before cleaning.
- Use a soft cloth moistened with mild detergent to clean the display housing.
- Disconnect the power plug from AC outlet if the product is not being used for a long period of time.

Don't:

- Block the slots and openings on the projector provided for ventilation.
- Use abrasive cleaners, waxes or solvents to clean the unit.
- Use under the following conditions:
  - In extremely hot, cold or humid environments.
  - In areas susceptible to excessive dust and dirt.
  - Near any appliance that generates a strong magnetic field.
  - Place in direct sunlight.

Precautions

Follow all warnings, precautions and maintenance as recommended in this user's guide to maximize the life of your unit.

Warning:

- Do not look into the projector's lens when the lamp is on. The bright light may hurt your eyes.
- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
- Please do not open or disassemble the product as this may cause electric shock.
- When changing the lamp, please allow the projector to cool down, and follow all changing instructions.
- This product will detect the life of the lamp itself. Please be sure to change the lamp when it shows warning messages.
- Reset the "Lamp Hour Reset" function from the Onscreen Display "Management" menu after replacing the lamp module.
- When switching the projector off, please ensure the projector completes its cooling cycle before disconnecting power.
- Turn on the projector first and then the signal sources.
- Do not use lens cap when projector is in operation.
- When the lamp reaches the end of its life, it will burn out and may make a loud popping sound. If this happens, the projector will not turn back on until the lamp module has been replaced. To replace the lamp, follow the procedures listed under "Replacing the Lamp".

Downloaded From projector-manual.com Acer Manuals

Contents

Information for Your Safety and Comfort iii

First Thing First viii

- Usage Notes viii
- Precautions viii

Introduction 1

- Product Features 1
- Package Overview 2
- Projector Overview 3
  - Projector Outlook 3
  - Control Panel 4
  - Remote Control Layout 5

Getting Started 7

- Connecting the Projector 7
- Turning the Projector On/Off 9
  - Turning On the Projector 9
  - Turning Off the Projector 10
- Adjusting the Projected Image 11
  - Adjusting the Height of the Projected Image 11
  - How to Optimize Image Size and Distance 12
  - How to Get a Preferred Image Size by Adjusting Distance and Zoom 15

User Controls 18

- Installation Menu 18
- Acer Empowering Technology 19
- Onscreen Display (OSD) Menus 20
- Color 21
- Image 23
- Setting 25
- Management 31
- Audio 32
- Timer 33
- Language 33

Appendices 34

Downloaded From projector-manual.com Acer Manuals

Troubleshooting 34
LED & Alarm Definition Listing 38
Replacing the Lamp 39
Ceiling Mount Installation 40
Specifications 43
Compatibility Modes 46
Regulations and safety notices 50

Downloaded From projector-manual.com Acer Manuals

Introduction

Product Features

This product is a single-chip DLP® projector, including the following outstanding features:

- DLP® technology
- P5206/N216/PN-X14/S5201/T111/PS-X11/S5201B/T111E/PS-X11K: Native 1024 x 768 XGA resolution
  Auto / 4:3 / 16:9 aspect ratio supported

  S5301WB/T121E/PS-W11K: Native 1280 x 800 WXGA resolution
  Auto / Full / 4:3 / 16:9 / L.Box aspect ratio supported
- Acer ColorBoost technology delivers vivid, life-like images
- High brightness and contrast ratio
- Versatile display modes enable optimum performance in any situation
- NTSC/PAL/SECAM compatible and HDTV (720p, 1080i, 1080p) supported
- Lower power consumption and economy (ECO) mode extends lamp life
- Acer EcoProjeciton Technology delivers Intelligent power management approach and physical efficiency improvement
- Empowering Key reveals Acer Empowering Technology functions (Acer eView, eTimer, eOpening, ePower Management) for easy adjustment of settings
- Advanced keystone correction delivers optimum presentations
- Multi-language Onscreen Display (OSD) menus
- Full-function remote control
- P5206/N216/PN-X14: Manual focus projection lens zooms up to 1.3X
- 2X digital zoom and pan move function
- Microsoft® Windows® 2000, XP, 7, Vista® OS compliant
- LAN settings enable remote management of projectors via a web browser
- Enables projecting 3D content via DLP Link technology
- Acer Color Safe technology ensures consistent color rendition over time
- Smart detection delivers quick, intelligent source detection

Downloaded From projector-manual.com Acer Manuals

Package Overview

This projector comes with all the items shown below. Check to make sure you have them all. Contact your dealer immediately if any thing is missing.

Projector with lens cap



Power cord

VGA cable

Composite video cable

Security card

User's guide (CD-ROM)

Remote control

Quick start guide

Battery x 2

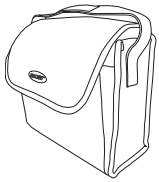

Carrying case

Acer Projector Gateway (CD-ROM) (for S5201B/T111E/PS-X11K/S5301WB/T121E/PS-W11K)

Acer Projector Gateway quick start guide (for S5201B/T111E/PS-X11K/ S5301WB/T121E/PS-W11K)



Dust filter (Optional)

Downloaded From projector-manual.com Acer Manuals

Projector Overview

Projector Outlook

Front / upper side

(P5206/N216/PN-X14)

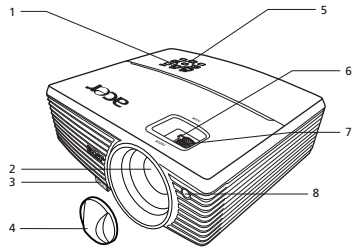

(S5201/T111/PS-X11/S5201B/T111E/PS-X11K/S5301WB/T121E/PS-W11K)

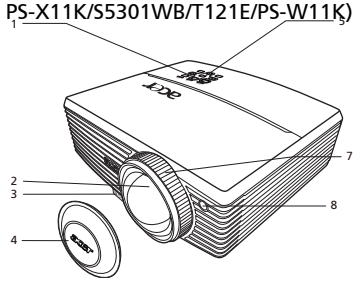

#	Description	#	Description
1	Power key and Power indicator LED	5	Control panel
2	Projection lens	6	Zoom ring
3	Elevator button	7	Focus ring
4	Lens cap	8	Remote control receiver

Rear side

(S5201B/T111E/PS-X11K/S5301WB/T121E/PS-W11K)

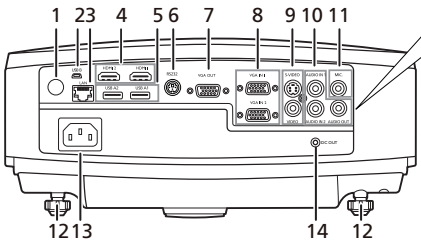

(P5206/N216/PN-X14/S5201/T111/PS-X11/)

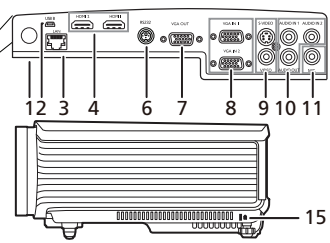

#	Description	#	Description
1	Remote control receiver	9	S-Video input connector/ Composite video input connector
2	USB connector (Type mini B)		
3	LAN (RJ45 port for 10/100M Ethernet)	10	Audio input connector/ Audio output connector
4	HDMI connector	11	Microphone input connector
5	USB connector (Type A)	12	Tilt adjusting wheel
6	RS232 connector	13	Power socket
7	Monitor loop-through output connector	14	12V DC output connector
8	PC analog signal/HDTV/component video input connector (VGA IN 1/ VGA IN 2)	15	Kensington™ lock port

Downloaded From projector-manual.com Acer Manuals

Control Panel

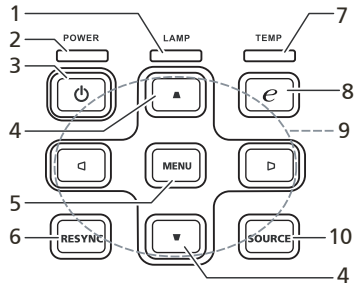

#	Function	Description
1	LAMP	Lamp indicator LED
2	POWER	Power indicator LED
3	Power key	Refer to the "Turning the Projector On/ Off" section.
4	Keystone	Adjusts image distortion caused by tilting projection (±40 degrees).
5	MENU	• Launches the Onscreen Display (OSD) menu, returns to the previous step for the OSD menu operation or exits the OSD menu. • Confirms your selection of items.
6	RESYNC	Automatically synchronizes the projector to the input source.
7	TEMP	Temp indicator LED
8	Empowering key	Enables unique Acer functions: eView, eTimer, eOpening, ePower Management.
9	Four directional select keys	Selects items or makes adjustments to your selection.
10	SOURCE	Chooses RGB, component video, S-Video, composite video, HDMI™ or HDTV source.

Downloaded From projector-manual.com Acer Manuals

Remote Control Layout

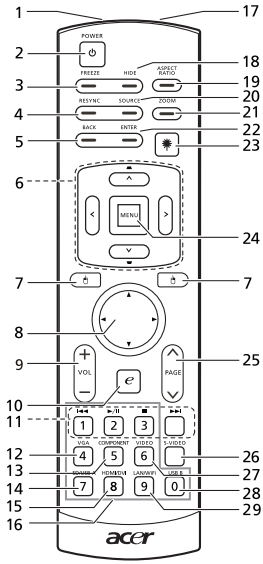

#	Function	Description
1	Infrared transmitter	Sends signals to the projector.
2	POWER	Refer to the "Turning the Projector On/Off" section.
3	FREEZE	To pause the screen image.
4	RESYNC	Automatically synchronizes the projector to the input source.
5	BACK	Goes back to the previous selection.
6	Keystone	Adjusts image distortion caused by tilting projection (±40 degrees).
	Four directional select keys	Selects items or makes adjustments to your selection.
7	Mouse button	This function is not available with the projector.
8	Four directional select pad	Selects the media files in four directions.
9	VOL +/-	Increases/decreases the volume.
10	Empowering key	Enables unique Acer functions: eView, eTimer, eOpening, ePower Management.

Downloaded From projector-manual.com Acer Manuals

#	Function	Description
11	⏮ Rewind ⏯ Play/Pause ■ Stop ⏭ Fast-forward	Rewinds/Plays/Pauses/Stops/Fast-forwards the playing media files.
12	VGA	To change source to VGA. This connector supports analog RGB, YPbPr (480p/576p/720p/1080i/1080p), and YCbCr (480i/576i).
13	COMPONENT	To change source to Component video. This connector supports YPbPr.
14	SD/USB A	To change source to SD/USB A. This projector only supports files in JPEG format. (for S5201B/T111E/PS-X11K/S5301WB/T121E/PS-W11K)
15	HDMI™/DVI	To change source to HDMI™/DVI (for the model with HDMI™/DVI connector).
16	Keypad 0~9	Press "**0~9**" to input a password in the "Setting > Security" OSD.
17	Laser pointer window	Shines the laser point light when the Laser button is pressed.
18	HIDE	Press "**HIDE**" to hide screen image; press again to display the image.
19	ASPECT RATIO	To choose the desired aspect ratio (Auto/4:3/16:9).
20	SOURCE	Chooses RGB, component video, S-Video, composite video, HDMI™, or HDTV source.
21	ZOOM	Zooms the projector display in or out.
22	ENTER	Confirms your selection of items.
23	Laser	Emits visible laser pointer light for presentation purposes. This function is not available for the projectors sold in the Japanese market.
24	MENU	Launches the Onscreen Display (OSD) menu, returns to the previous step for the OSD menu operation or exits the OSD menu.
25	PAGE ^/v	For computer mode only. Use the button to select the next or previous page. This function is only available when connected to a computer via a USB cable.
26	S-VIDEO	To change source to S-Video.
27	VIDEO	To change source to Composite video.
28	USB B	To change source to USB B.
29	LAN/WiFi	To change source to LAN/WiFi. (for LAN/wireless compatible models)

Downloaded From projector-manual.com Acer Manuals

Getting Started

Connecting the Projector

- P5206/N216/PN-X14/S5201/T111/PS-X11

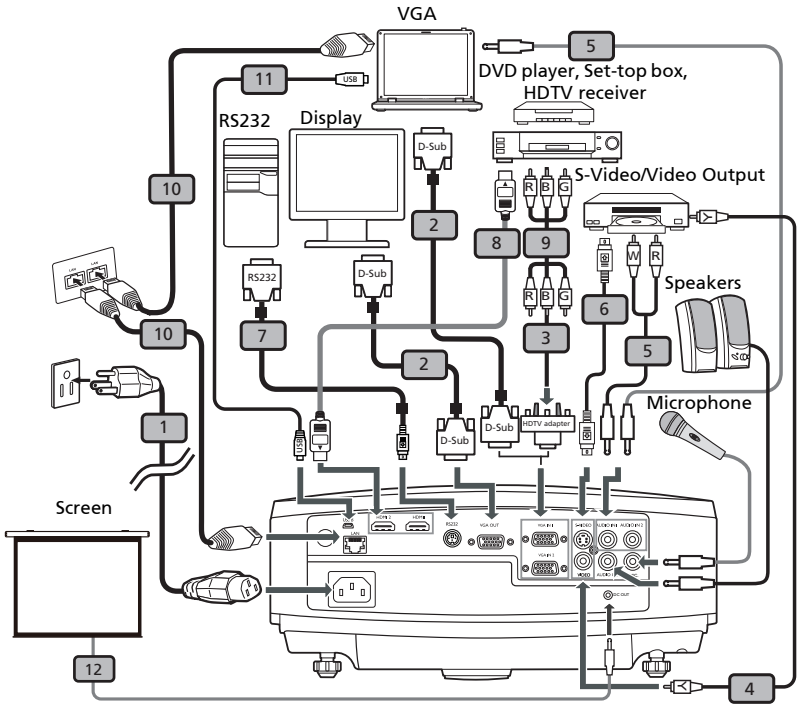

#	Description	#	Description
1	Power cord	7	RS232 cable
2	VGA cable	8	HDMI cable
3	VGA to component video/HDTV adapter	9	3 RCA component cable
4	Composite video cable	10	RJ45 cable
5	Audio cable	11	USB cable
6	S-Video cable	12	12V DC cable

Note: To ensure the projector works well with your computer, please make sure the timing of the display mode is compatible with the projector.

Downloaded From projector-manual.com Acer Manuals

- S5201B/T111E/PS-X11K/S5301WB/T121E/PS-W11K

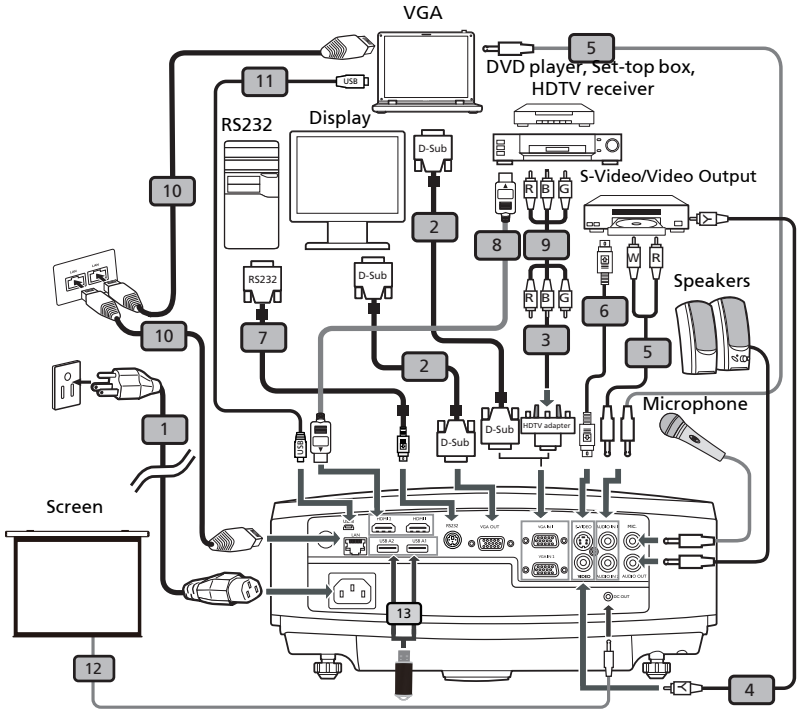

#	Description	#	Description
1	Power cord	8	HDMI cable
2	VGA cable	9	3 RCA component cable
3	VGA to component video/HDTV adapter	10	RJ45 cable
4	Composite video cable	11	USB cable
5	Audio cable	12*	USB storage device/USB Wifi adapter (Optional)
6	S-Video cable	13	12V DC cable
7	RS232 cable		

Note: To ensure the projector works well with your computer, please make sure the timing of the display mode is compatible with the projector.

Note: "*" USB drive limitation, do not support power.

Downloaded From projector-manual.com Acer Manuals

Turning the Projector On/Off

Turning On the Projector

1 Remove the lens cap.

2 Ensure that the power cord and signal cable are securely connected. The Power LED will light red.

3 Turn on the projector by pressing ⏻ (POWER) on the control panel or remote control, and the Power indicator LED will turn blue.

4 Turn on your source (computer, notebook, video player, etc.). The projector will detect your source automatically.

- If the screen displays "No Signal", please make sure the signal cables are securely connected.
- If you connect to multiple sources at the same time, use "SOURCE" on the control panel or remote control, or the direct source key on the remote control to switch between inputs.

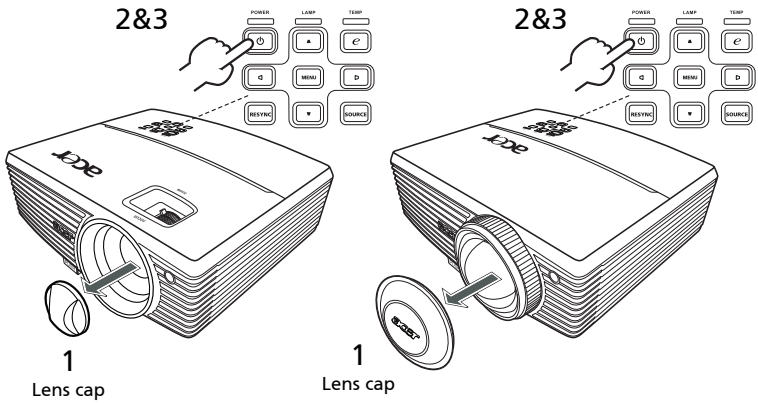

Downloaded From projector-manual.com Acer Manuals

Turning Off the Projector

1 To turn the projector off, press the power button. This message appears:
"Please press the power button again to complete the shutdown process."
Press the power button again.

2 The LED power indicator will turn RED and blink rapidly after the projector is turned off, and the fan(s) will continue to operate for about 2 minutes to ensure that the system cools properly.

3 As long as the power cord remains plugged in, you can press the power button to turn the projector immediately back on anytime during the 2-minute shutdown process.

4 Once the system has finished cooling, the LED power indicator will stop blinking and turn solid red to indicate standby mode.

5 It is now safe to unplug the power cord.

Warning indicators:

- **"Projector Overheated. Lamp will automatically turn off soon."**
  This onscreen message indicates that the projector has overheated. The lamp will automatically turn off, the projector will automatically shut down, and the LED temp indicator will turn solid red. Contact your local dealer or service center.
- **"Fan failed. Lamp will automatically turn off soon."**
  This onscreen message indicates that the fan has failed. The lamp will automatically turn off, the projector will automatically shut down, and the LED temp indicator will blink. Contact your local dealer or service center.

Note: Whenever the projector automatically shuts down and the LED lamp indicator turns solid red, contact your local reseller or service center.

Downloaded From projector-manual.com Acer Manuals

Adjusting the Projected Image

Adjusting the Height of the Projected Image

The projector is equipped with an elevator foot for adjusting the image height.

To raise the image:

1 Press the elevator button.

2 Raise the image to the desired height angle, then release the button to lock the elevator foot into position.

3 Use Tilt adjusting wheel to fine-tune the display angle.

To lower the image:

1 Press the elevator button.

2 Lower the image to the desired height angle, then release the button to lock the elevator foot into position.

3 Use Tilt adjusting wheel to fine-tune the display angle.

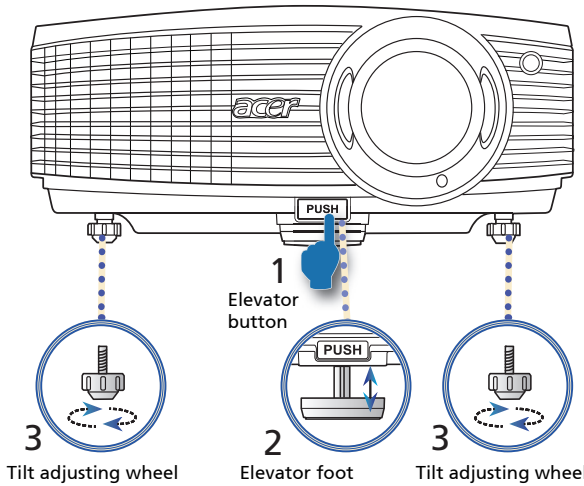

Downloaded From projector-manual.com Acer Manuals

How to Optimize Image Size and Distance

Consult the table below to find the optimal image sizes achievable when the projector is positioned at a desired distance from the screen.

- P5206/N216/PN-X14

If the projector is 3 m from the screen, good image quality is possible for image sizes between 75" and 98".

Note: Remind as below figure, the space of 161 cm height is required when the projector is located at 3 m distance.

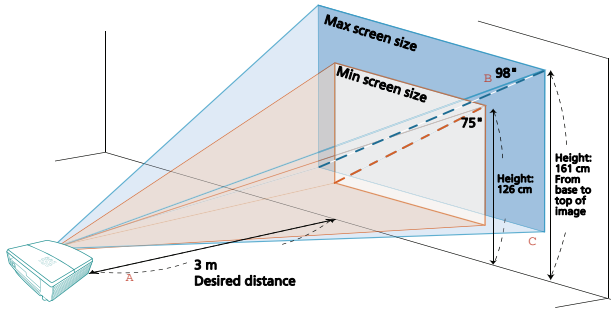

Desired Distance (m) < A >	Minimum Screen Size (Min zoom)			Maximum Screen Size (Max zoom)		
	Diagonal (inch) < B >	W (cm) x H (cm)	From base to top of image (cm) < C >	Diagonal (inch) < B >	W (cm) x H (cm)	From base to top of image (cm) < C >
1	25	51 x 38	41	33	66 x 50	54
1.5	38	76 x 57	62	49	99 x 75	80
2	50	102 x 76	82	65	132 x 99	106
2.5	63	127 x 95	103	81	166 x 124	133
3	75	152 x 114	123	98	199 x 149	161
3.5	88	178 x 133	144	114	232 x 174	187
4	100	203 x 152	164	130	265 x 199	213
4.5	113	228 x 171	185	147	298 x 224	241
5	125	254 x 190	205	163	331 x 248	267
6	150	305 x 228	246	196	397 x 298	321
7	175	355 x 266	287	228	464 x 348	374
8	201	406 x 305	329	261	530 x 397	428
9	226	457 x 343	370	293	596 x 447	480
10	251	508 x 381	411	326	662 x 497	534
11	276	558 x 419	452	359	728 x 546	588
12	301	609 x 457	493	391	795 x 596	641

Zoom Ratio: 1.3 x

Downloaded From projector-manual.com Acer Manuals

- S5201/T111/PS-X11/S5201B/T111E/PS-X11K

If the projector is 2 m from the screen, good image quality is possible for image sizes around 161".

Note: Remind as below figure, the space of 320 cm height is required when located at 2 m distance.

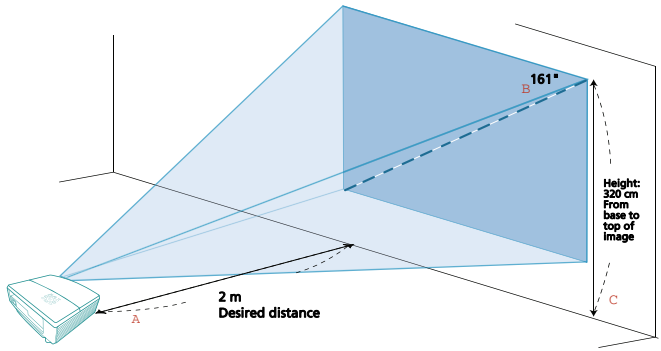

Desired Distance (m) < **A** >	Screen Size		
	Diagonal (inch) < **B** >	W (cm) x H (cm)	From base to top of image (cm) < **C** >
0.5	40	82 x 61	80
0.8	65	131 x 98	128
1.1	89	180 x 135	176
1.4	113	230 x 172	224
1.7	137	279 x 209	272
2	161	328 x 246	320
2.3	186	377 x 283	368
2.6	210	426 x 320	416
2.9	234	475 x 357	464
3.2	258	525 x 393	511
3.7	299	607 x 455	591

Zoom Ratio: 1.0 x

Downloaded From projector-manual.com Acer Manuals

- S5301WB/T121E/PS-W11K

If the projector is 2 m from the screen, good image quality is possible for image sizes around 189".

Note: Remind as below figure, the space of 281 cm height is required when located at 2 m distance.

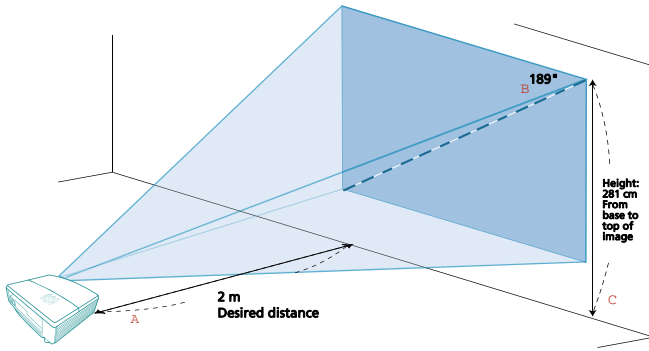

Desired Distance (m) < **A** >	Screen Size		
	Diagonal (inch) < **B** >	W (cm) x H (cm)	From base to top of image (cm) < **C** >
0.5	47	102 x 64	70
0.6	57	122 x 77	84
0.7	66	143 x 89	98
0.8	76	163 x 102	112
0.9	85	184 x 115	126
1	95	204 x 128	140
1.5	142	306 x 191	210
2	189	408 x 255	281
2.5	237	510 x 319	351
3	284	612 x 383	421
3.5	332	714 x 446	491

Zoom Ratio: 1.0 x

Downloaded From projector-manual.com Acer Manuals

How to Get a Preferred Image Size by Adjusting Distance and Zoom

The table below shows how to achieve a desired image size by adjusting either the position or the zoom ring.

- P5206/N216/PN-X14

To obtain an image size of 50" set the projector at a distance between 1.5 m and 2.0 m from the screen and adjust the zoom level accordingly.

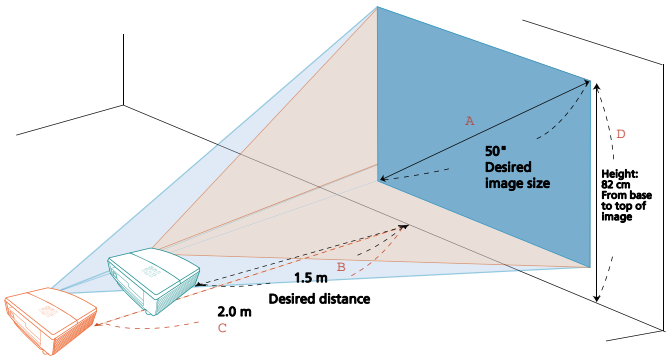

Desired Image Size		Distance (m)		Top (cm)
Diagonal (inch) < **A** >	W (cm) x H (cm)	Max zoom < **B** >	Min zoom < **C** >	From base to top of image < **D** >
30	61 x 46		1.2	49
40	81 x 61	1.2	1.6	66
50	102 x 76	1.5	2.0	82
60	122 x 91	1.8	2.4	98
70	142 x 107	2.1	2.8	115
80	163 x 122	2.5	3.2	131
90	183 x 137	2.8	3.6	147
100	203 x 152	3.1	4.0	164
120	244 x 183	3.7	4.8	197
150	305 x 229	4.6	6.0	246
180	366 x 274	5.5	7.2	295
200	406 x 305	6.1	8.0	328
250	508 x 381	7.7	10.0	410
300	610 x 457	9.2		491

Zoom Ratio: 1.3 x

Downloaded From projector-manual.com Acer Manuals

- S5201/T111/PS-X11/S5201B/T111E/PS-X11K

To obtain an image size of 50" set the projector at a distance 0.6 m from the screen.

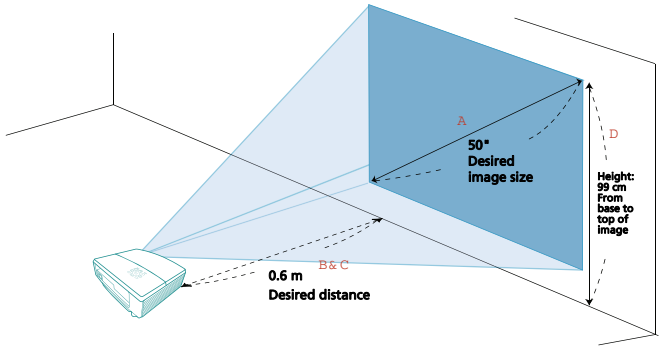

Desired Image Size		Distance (m)		Top (cm)
Diagonal (inch) < **A** >	W (cm) x H (cm)	Max zoom < **B** >	Min zoom < **C** >	From base to top of image < **D** >
30	61 x 46	0.4	0.4	59
40	81 x 61	0.5	0.5	79
50	102 x 76	0.6	0.6	99
60	122 x 91	0.7	0.7	119
70	142 x 107	0.9	0.9	139
80	163 x 122	1.0	1.0	158
90	183 x 137	1.1	1.1	178
100	203 x 152	1.2	1.2	198
120	244 x 183	1.5	1.5	238
150	305 x 229	1.9	1.9	297
180	366 x 274	2.2	2.2	357
200	406 x 305	2.5	2.5	396
250	508 x 381	3.1	3.1	495
300	610 x 457	3.7	3.7	594

Zoom Ratio: 1.0 x

Downloaded From projector-manual.com Acer Manuals

- S5301WB/T121E/PS-W11K

To obtain an image size of 50" set the projector at a distance 0.5 m from the screen.

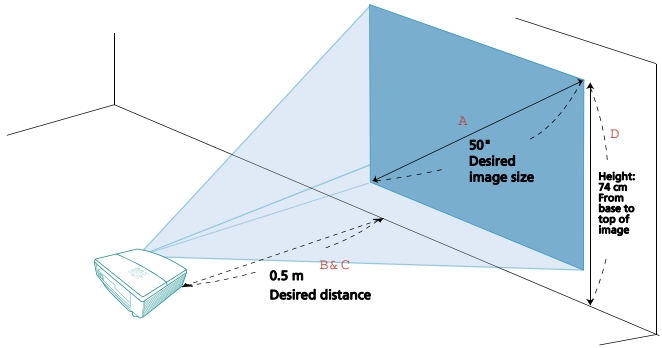

Desired Image Size		Distance (m)		Top (cm)
Diagonal (inch) < **A** >	W (cm) x H (cm)	Max zoom < **B** >	Min zoom < **C** >	From base to top of image < **D** >
30	65 x 40	0.3	0.3	44
40	86 x 54	0.4	0.4	59
50	108 x 67	0.5	0.5	74
60	129 x 81	0.6	0.6	89
70	151 x 94	0.7	0.7	104
80	172 x 108	0.8	0.8	118
90	194 x 121	0.9	0.9	133
100	215 x 135	1.1	1.1	148
120	258 x 162	1.3	1.3	178
150	323 x 202	1.6	1.6	222
180	388 x 242	1.9	1.9	267
200	431 x 269	2.1	2.1	296
250	538 x 337	2.6	2.6	370
300	646 x 404	3.2	3.2	444

Zoom Ratio: 1.0 x

Downloaded From projector-manual.com Acer Manuals

User Controls

Installation Menu

The installation menu provides an onscreen display (OSD) for projector installation and maintenance. Use the OSD only when the message "No signal input" is displayed on the screen.

1 Turn on the projector by pressing (POWER) on the control panel or remote control.

2 Press "MENU" on the control panel or remote control to launch the OSD for projector installation and maintenance.

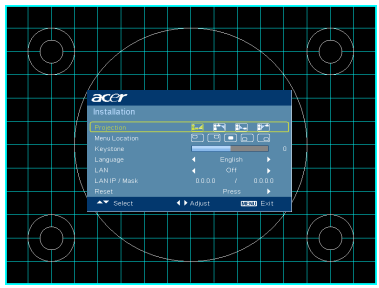

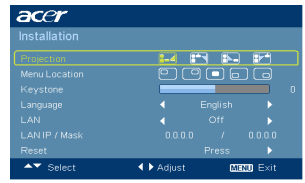

3 The background pattern acts as a guide to adjust the calibration and alignment settings, such as screen size and distance, focus and more.

4 The Installation menu includes the following options:

- Projection method
- Menu location
- Keystone settings
- Language settings
- LAN settings
- Reset to factory default functions

Use the up and down arrow keys to select an option, the left and right arrow keys to adjust selected option settings, and the right arrow key to enter a submenu for feature setting. The new settings will be saved automatically upon exiting the menu.

5 Press "MENU" anytime to exit the menu and return to the Acer welcome screen.

Downloaded From projector-manual.com Acer Manuals

Acer Empowering Technology

Empowering Key 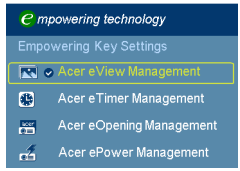	Acer Empowering Key provides three Acer unique functions: "Acer eView Management", "Acer eTimer Management", "Acer eOpening Management" and "Acer ePower Management". Press "e" for more than one second to launch the Onscreen Display main menu to modify its function.
Acer eView Management (S5201/T111/PS-X11/ S5201B/T111E/PS-X11K/ S5301WB/T121E/PS-W11K) 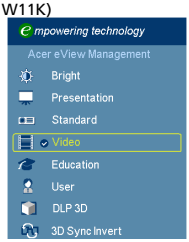 (P5206/N216/PN-X14) 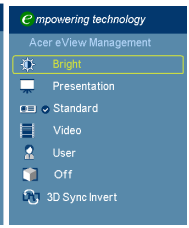	Press "e" to launch "Acer eView Management". "Acer eView Management" is for display mode selection. Please refer to the "Onscreen Display (OSD) Menus" section for more details. The 3D and 3D Sync Invert functions offer quick access of 3D functions here.
Acer eTimer Management 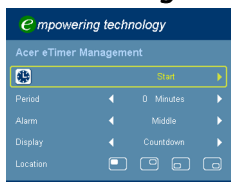	Press "e" to launch "Acer eTimer Management". "Acer eTimer Management" provides the reminding function for presentation time control. Please refer to the "Onscreen Display (OSD) Menus" section for more details.
Acer eOpening Management 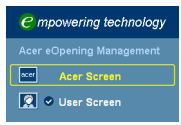	Press "e" to launch "Acer eOpening Management". "Acer eOpening Management" allows users to change the Startup Screen to their personalized image. Please refer to the "Onscreen Display (OSD) Menus" section for more details.
Acer ePower Management 	Press "e" to launch "Acer ePower Management". "Acer ePower Management"provides you one shortcut to save the lamp and projector's life. Please refer to the "Onscreen Display (OSD) Menus" section for more details.

Downloaded From projector-manual.com Acer Manuals

English

Onscreen Display (OSD) Menus

The projector has multilingual Onscreen Display (OSD) menus that allow you to make image adjustments and change a variety of settings.

Using the OSD menus

- To open the OSD menu, press "MENU" on the control panel or remote control.
- When the OSD is displayed, use ▲▼ to select an item in the main menu.

  After selecting the desired main menu item, press ▶ to enter a submenu for feature setting.
- Use ▲▼ to select the desired item and adjust the settings by using ◀▶.
- Select the next item to be adjusted in the submenu and adjust as described above.
- Press "MENU" on the control panel or remote control, the screen will return to the main menu.
- To exit the OSD menu, press "MENU" on the control panel or remote control again. It will close and the projector will automatically save the new settings.

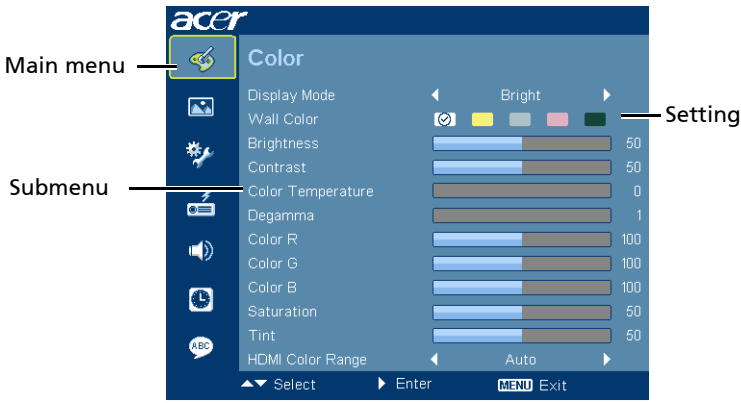

Downloaded From projector-manual.com Acer Manuals

Color

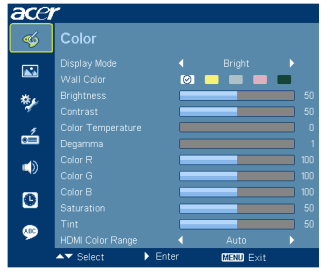

Display Mode	There are many factory presets optimized for various types of images. • Bright: For brightness optimization. • Presentation: For meeting presentation with higher brightness. • Standard: For common environment. • Video: For playing video in a bright environment. • Education: For education environment. (for S5201/ T111/PS-X11/S5201B/T111E/PS-X11K/S5301WB/T121E/ PS-W11K) • User: Memorize user's settings.
Wall Color	Use this function to choose a proper color according to the wall. There are several choices, including white, light yellow, light blue, pink, dark green. It will compensate the color deviation due to the wall color to show the correct image tone.
Brightness	Adjusts the brightness of the image. • Press ◀ to darken the image. • Press ▶ to lighten the image.
Contrast	Controls the degree of difference between the lightest and darkest parts of the picture. Adjusting the contrast changes the amount of black and white in the image. • Press ◀ to decrease the contrast. • Press ▶ to increase the contrast.
Color Temperature	Adjusts the color temperature. At higher color temperatures, the screen looks colder; at lower color temperatures, the screen looks warmer.

Downloaded From projector-manual.com Acer Manuals

Degamma	Effects the representation of dark scenery. With greater gamma value, dark scenery will look brighter.
Color R	Adjusts the red color.
Color G	Adjusts the green color.
Color B	Adjusts the blue color.
Saturation	Adjusts a video image from black and white to fully saturated colors. • Press ◀ to decrease the amount of color in the image. • Press ▶ to increase the amount of color in the image.
Tint	Adjusts the color balance of red and green. • Press ◀ to increase the amount of green in the image. • Press ▶ to increase the amount of red in the image.
HDMI Color Range	Adjusts the color range of the HDMI image data to prevent color display error. • Auto: Automatically adjusts the color range by information from the player. • Limited Range: Processes the input image as limited color range data. • Full Range: Processes the input image as full color range data.

Note: "Saturation" and "Tint" functions are not supported under computer, or HDMI (PC) mode.

Note: "HDMI Color Range" is only available when the input signal is HDMI.

Downloaded From projector-manual.com Acer Manuals

Image

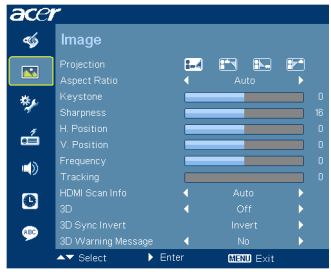

Projection	• Front-Desktop: The factory default setting. • Front-Ceiling: When you select this function, the projector inverts the image for ceiling-mounted projection. • Rear-Desktop: When you select this function, the projector reverses the image so that you can project behind a translucent screen. • Rear-Ceiling: When you select this function, the projector reverses and inverts the image at same time. You can project from behind a translucent screen with ceiling mounted projection.
Aspect Ratio	Use this function to choose your desired aspect ratio. • Auto: Keeps the image with original width-height ratio and maximizes the image to fit native horizontal or vertical pixels. • 4:3: The image will be scaled to fit the screen and displayed using a 4:3 ratio. • 16:9: The image will be scaled to fit the screen and displayed using a 16:9 ratio. • Full (for S5301WB/T121E/PS-W11K): The image will be displayed making full use of the horizontal and vertical pixels. • L.Box (for S5301WB/T121E/PS-W11K): Keeps the original signal aspect ratio and zooms in by 1.333 times.
Keystone	Manually adjusts image distortion caused by tilting projection (±40 degrees).

Downloaded From projector-manual.com Acer Manuals

Sharpness	Adjusts the sharpness of the image. • Press ◀ to decrease the sharpness. • Press ▶ to increase the sharpness.
H. Position (Horizontal Position)	• Press ◀ to move the image left. • Press ▶ to move the image right.
V. Position (Vertical Position)	• Press ◀ to move the image down. • Press ▶ to move the image up.
Frequency	Changes the projector's refresh rate to match the frequency of your computer's graphics card. If you experience a vertical flickering bar in the projected image, use this function to correct it.
Tracking	Synchronizes the signal timing of the display with the graphics card. If you experience an unstable or flickering image, use this function to correct it.
HDMI Scan Info	Adjusts the overscan ratio of the HDMI image on screen. • Auto: Automatically adjusts the overscan ratio by information from the player. • Underscan: Always no overscan on the HDMI image. • Overscan: Always keep overscan on the HDMI image.
3D	Choose "On" to enable DLP 3D function. • DLP 3D Select this item while using DLP 3D glasses, quad buffer (NVIDIA/ATI...) graphics card and HQFS format file or DVD with corresponding SW player. • Off Turns off 3D mode.
3D Sync Invert	If you see a discrete or overlapping image while wearing DLP 3D glasses, you may need to execute "Invert" to get best match of left/right image sequence to get the correct image (for DLP 3D).
3D Warning Message	Choose "On" to display the 3D warning message. 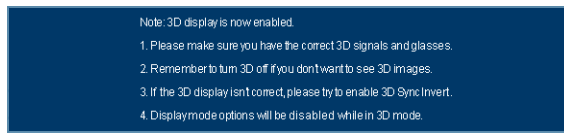

Downloaded From projector-manual.com Acer Manuals

Note: "H. Position", "V. Position", "Frequency" and "Tracking" functions are not supported under video mode.

Note: "Sharpness" function is not supported under computer mode.

Note:

The 3D function is supported by VGA source only. Please see the timing table for detailed 3D timings.

It needs correct settings on graphics card 3D application program for correct 3D display.

The SW players, such as Stereoscopic Player and DDD TriDef Media Player can support 3D format files. You can download these players on web page below.

-NVIDIA Stereoscopic 3D Video Player: http://www.nvidia.com/object/3D_Drivers_Downloads.html

-Stereoscopic Player: http://www.3dtv.at/Downloads/Index_en.aspx

-DDD TriDef Media Player: http://www.tridef.com/download/TriDef-3-D-Experience-4.0.2.html

Note: "3D Sync Invert" is only available when DLP 3D is enabled.

Setting

(P5206/N216/PN-X14/S5201/T111/PS-X11)

(S5201B/T111E/PS-X11K/S5301WB/T121E/PS-W11K)

Menu Location	Chooses the OSD menu location on the display screen.

Downloaded From projector-manual.com Acer Manuals

Startup Screen	Use this function to select your desired startup screen. If you change the setting, it will take effect when you exit the OSD menu. • Acer: The default startup screen of your Acer projector. • User: Use the memorized picture from the "Screen Capture" function.
Screen Capture	Use this function to customize the startup screen. To capture the image that you want to use as the startup screen, follow the instructions below. Notice: Before proceeding with the following steps, make sure that the "Keystone" is set to the default value "0", and the "Aspect Ratio" is set to "4:3". For details, refer to the "Image" section. • Change the "Startup Screen" from the default setting "Acer" to "User". • Press "Screen Capture" to customize the startup screen. • A dialog box appears to confirm the action. Choose "Yes" to use the current image as your customized startup screen. Choose "No" to cancel the screen capture and exist the onscreen display (OSD). • A message appears stating that the screen capture is in progress. • When the screen capture is finished, the message disappears and the original display is shown. • The customized startup screen takes effect when there is a new input signal or when you restart the projector. **Note:** This screen capture function is limited by 4:3 aspect ratio only. **Note:** For XGA models, to get best quality for your desired image, it is suggested that you set the PC resolution to 1024 x 768 before using this function. **Note:** For SVGA models, to get best quality for your desired image, it is suggested that you set the PC resolution to 800 x 600 before using this function. **Note:** For WXGA models, to get best quality for your desired image, it is suggested that you set the PC resolution to 1280 x 800 before using this function.

Downloaded From projector-manual.com Acer Manuals

Closed Caption	Selects a preferred closed captioning mode from CC1, CC2, CC3, CC4, (CC1 displays captions in the primary language in your area). Select "Off" to turn off the captioning feature. This function is only available when a composite video or S-Video input signal is selected and its system format is NTSC. Set your screen aspect ratio to 4:3. The function is not available when the aspect ratio is "16:9" or 16:9 format detected under "Auto mode".
Security 	**Security** This projector provides a useful security function for the administrator to manage the projector. Press ▶ to change the "Security" setting. If the security function is enabled, your must enter "Administrator Password" first before changing the security setting. The factory default of "Administrator Password" is "1234". • Select "On" to enable the security function. You have to enter password depending on the "Security Mode". Please refer to "User Password" section for details. • If "Off" is selected, you can switch on the projector without password.
	Timeout (Min.) Once "Security" is set to "On", you can set timeout function. • Press ◀ ▶ to select timeout duration. • The range is from 10 to 990 minutes. • When time is up, the projector will request you to enter the password again. • The factory default setting of "Timeout (Min.)" is "Off". • Once the security function is enabled, the projector will request you to enter password when switching on the projector. Both "User Password" and "Administrator Password" can be accepted for this dialogue.

Downloaded From projector-manual.com Acer Manuals

<table>
<tr>
<td>
</td>
<td>User Password
• Press ▶ to set up or change "User Password".
• Use the numerical keys on the remote control to set the password and press "MENU" to confirm.
• To delete the digits, Press ◀.
• Enter the password again when you see "Confirm Password" displayed.
• The password should be 4~8 digits in length.
• If you select "Request password only after plugging power cord", you are requested to input the password every time the power cord is plugged.
• If you select "Always request password while projector turns on", you are requested to input the password every time the projector is turned on.</td>
</tr>
<tr>
<td>
</td>
<td>Administrator Password
You can enter "Administrator Password" when the "Enter Administrator Password" or "Enter Password" dialogue box is displayed.
• Press ▶ to change "Administrator Password".
• The factory default of "Administrator Password" is "1234".
If you forget your administrator password, do the following to retrieve the administrator password:
• Enter the unique 6-digit "Universal Password" which is printed on the Security Card that came with your projector. This unique password will be accepted by the projector no matter what the administrator password is.
• If the Security Card is lost, please contact your local Acer service center.
Lock User Startup Screen
• The default value is "Off". If it is "On", you cannot change the startup screen arbitrarily.</td>
</tr>
<tr>
<td>VGA OUT</td>
<td>Selecting "On" enables the function. The projector can output a VGA signal when it is in standby mode and the VGA IN (or VGA IN 1) and VGA OUT sockets are correctly connected to the devices.
Enabling this function slightly increases the standby power consumption.</td>
</tr>
</table>

Downloaded From projector-manual.com Acer Manuals

Reset	Press ▶ after choosing "Yes" to return the display parameters on all menus to the factory default settings.
LAN Setting (for P5206/ N216/PN-X14/ S5201/T111/PS-X11)	To connect your projector to the network: 1 Take a RJ45 cable and connect one end to the LAN input jack of the projector and the other end to the RJ45 port. 2 Enter the LAN Setting menu. The "Enter Administrator Password" dialogue box is displayed. 3 Enter "Administrator Password". The next level menu is displayed. The factory default of "Administrator Password" is "1234". You can change it in the Setting > Security > Administrator Password menu. 4 Select LAN in this menu and press ◀ ▶ to select "On". 5 Make sure DHCP is on, and press ▼ to select Apply and press ▶. 6 Re-enter the menu and note down the IP address displayed in the row of Projector IP Address. If your are not in a DHCP environment, set DHCP to "Off" and contact your ITS administrator for information on Projector IP Address, Subnet Mask, Default Gateway, and DNS Server. 1 Press ▼ to select Projector IP Address and press ▶. 2 Press ◀ ▶ to move the cursor and press ▲ ▼ to enter the digits. 3 When you finish, press MENU to save and exit the menu. 4 Repeat steps 1-3 to input addresses for Subnet Mask, Default Gateway, DNS server. 5 Press ▼ to highlight Apply and press ▶. To control the projector remotely: 1 Enter the Projector IP address in the address bar of the web browser on your computer. 2 The remote network operation page is displayed.You can control the projector by using this page. For details, see the notes following this table.
LAN Reset (for P5206/ N216/PN-X14/ S5201/T111/PS-X11)	Press ▶ after choosing "Yes" to return all items on the Tools page to the default settings.

Downloaded From projector-manual.com Acer Manuals

LAN (for S5201B/ T111E/PS-X11K/ S5301WB/ T121E/PS-W11K)	• The default value is "Off". Choose "On" to enable the LAN connection.
LAN IP/Mask (for S5201B/ T111E/PS-X11K/ S5301WB/ T121E/PS-W11K)	• Identify IP and Mask address.
LAN Reset (for S5201B/ T111E/PS-X11K/ S5301WB/ T121E/PS-W11K)	• Reset LAN function.
Auto Screen	The default value is "On". The up/down move of your electronic screen relates to power on/off of the projector.

About LAN Setting (for P5206/N216/PN-X14/S5201/T111/PS-X11)

Note 1 : An overview of the remote network operation page

Downloaded From projector-manual.com Acer Manuals

Note 2 : An overview of the Tools page

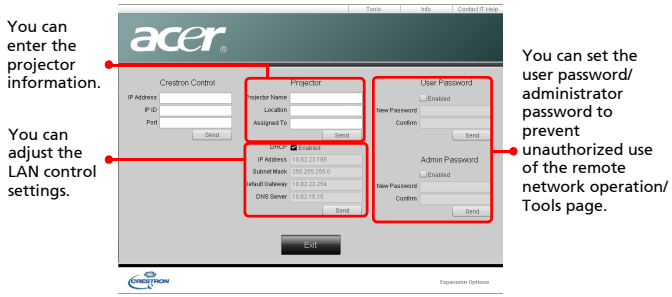
You can enter the projector information.
You can adjust the LAN control settings.
You can set the user password/ administrator password to prevent unauthorized use of the remote network operation/ Tools page.
Crestron Control
Projector
User Password
Admin Password
Exit

Note 3: The Info page shows the projector information and status.

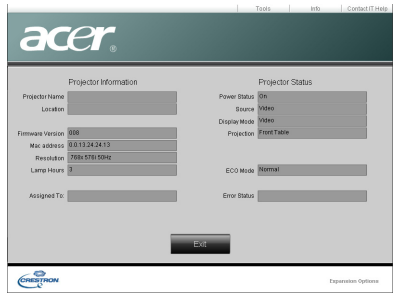

Management

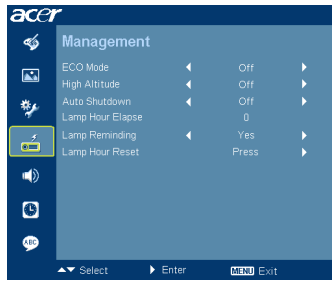

ECO Mode	Choose "On" to dim the projector lamp, which will also lower the power consumption, reduce noise, and extend the lamp life. Choose "Off" to return to the normal mode.

Downloaded From projector-manual.com Acer Manuals

High Altitude	Choose "On" to turn on the High Altitude mode. When this function is turned on, the projector fans operate at full speed continuously to cool down the projector's temperature.
Auto Shutdown (Minutes)	The projector will automatically shut down while there is no signal input detected after the setting time.
Lamp Hour Elapse	Displays the lamp's elapsed operating time (in hours).
Lamp Reminding	Choose this function to show or hide warning message when the changing lamp message is displayed. The message will show up 30 hours before end of life.
Lamp Hour Reset	Press ▶ after choosing "Yes" to turn the lamp hour counter to 0 hours.

Audio

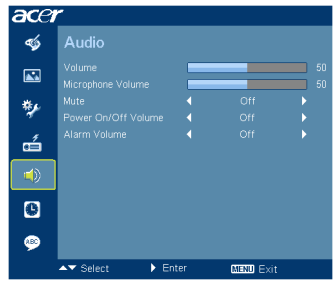

Volume	• Press ◀ to decrease the projector speaker volume. • Press ▶ to increase the projector speaker volume.
Microphone Volume	• Press ◀ to decrease the microphone volume. • Press ▶ to increase the microphone volume.
Mute	• Choose "On" to turn mute on. • Choose "Off" to turn mute off.
Power On/Off Volume	• Select this function to adjust the notification volume when turning the projector on/off.
Alarm Volume	• Select this function to adjust the volume of any warning notifications.

Downloaded From projector-manual.com Acer Manuals

Timer

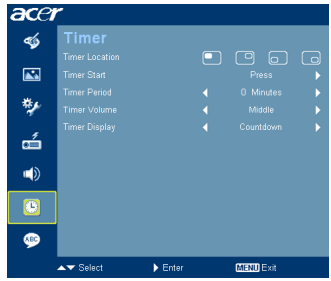

Timer Location	Sets the location of the timer on the screen.
Timer Start (or Stop)	Press ▶ to start or stop the timer.
Timer Period (Minutes)	Press ◀ ▶ to adjust the timer period.
Timer Volume	Select this function to adjust the notification volume when the timer function is enabled and time is up.
Timer Display	Press ◀ ▶ to choose a timer display mode.

Language

Language	Sets a language for the OSD menus. Use ▲ ▼ to select your preferred language. • Press ▶ to confirm the selection.

Downloaded From projector-manual.com Acer Manuals

Appendices

Troubleshooting

If you experience a problem with your Acer projector, refer to the following troubleshooting guide. If the problem persists, please contact your local reseller or service center.

Image Problems and Solutions

#	Problem	Solution
1	No image appears onscreen	• Make sure all the cables are correctly connected as described in the "Getting Started" section. • Ensure none of the connector pins are bent or broken. • Check if the projection lamp has been securely installed. Please refer to the "Replacing the Lamp" section. • Make sure you have removed the lens cap and the projector is switched on.

2	Partial, scrolling or incorrectly displayed image (For PC (Windows 95/98/2000/XP))	• Press "RESYNC" on the control panel or remote control.
		• For an incorrectly displayed image:
		  • Open "My Computer > Control Panel," and then double-click the "Display" icon.
		  • Select the "Settings" tab.
		  • Verify that your display resolution setting is lower than or equal to UXGA (1600 x 1200).
		  • Click the "Advanced Properties" button.
		If the problem still appears, change the monitor display you are using and follow the steps below:
		  • Verify that the resolution setting is lower than or equal to UXGA (1600 x 1200).
		  • Click the "Change" button under the "Monitor" tab.
		  • Click "Show all devices > Standard monitor types" under the SP box, and choose the resolution mode you need under the "Models" box.
		  • Verify that the resolution setting of the monitor display is lower than or equal to UXGA (1600 x 1200).

Downloaded From projector-manual.com Acer Manuals

3	Partial, scrolling or incorrectly displayed image (For notebooks)	• Press "RESYNC" on the control panel or remote control.
		• For an incorrectly displayed image:
		  • Follow the steps for item 2 (above) to adjust the resolution of your computer.
		  • Press the toggle output settings. Example: [Fn]+[F4], Compaq [Fn]+[F4], Dell [Fn]+[F8], Gateway [Fn]+[F4], IBM [Fn]+[F7], HP [Fn]+[F4], NEC [Fn]+[F3], Toshiba [Fn]+[F5]
		• If you experience difficulty changing resolutions or your monitor freezes, restart all equipment including the projector.

4	The screen of the notebook computer is not displaying your presentation	• If you are using a Microsoft® Windows® based notebook: Some notebook PCs may deactivate their own screens when a second display device is in use. Each has a different way to be reactivated. Refer to your computer's manual for detailed information. • If you are using an Apple® Mac® OS based notebook: In System Preferences, open Display and select Video Mirroring "On."
5	Image is unstable or flickering	• Use "Tracking" to correct it. Refer to the "Image" section for more information. • Change the display color setting on your computer.
6	Image has vertical flickering bar	• Use "Frequency" to make an adjustment. Refer to the "Image" section for more information. • Check and reconfigure the display mode of your graphics card to make it compatible with the projector.
7	Image is out of focus	• Make sure the lens cap is removed. • Adjusts the focus ring on the projector lens. • Make sure the projection screen is within the required distance of 3.9 to 30.2 feet (1.2 to 9.2 meters) from the P5206/N216/PN-X14 projector, 1.6 to 12.2 feet (0.5 to 3.7 meters) from the S5201/T111/PS-X11/S5201B/T111E/PS-X11K, or 1.6 to 10.4 feet (0.5 to 3.2 meters) from the S5301WB/T121E/PS-W11K projector. Refer to the "How to Get a Preferred Image Size by Adjusting Distance and Zoom" section for more information.

Downloaded From projector-manual.com Acer Manuals

8	Image is stretched when displaying a "widescreen" DVD title	When you play a DVD encoded in anamorphic or 16:9 aspect ratio you may need to adjust the following settings: • If you play a 4:3 format DVD title, please change the format to 4:3 with the projector OSD. • If the image is still stretched, you will also need to adjust the aspect ratio. Set up the display format to 16:9 (wide) aspect ratio on your DVD player.
9	Image is too small or too large	• Adjust the zoom lever on the top of the projector. • Move the projector closer to or further from the screen. • Press "MENU" on the control panel or remote control. Go to "Image > Aspect Ratio" and try different settings.
10	Image has slanted sides	• If possible, reposition the projector so that it is centered on the screen and below the bottom of the screen. • Press the Keystone correction keys on the control panel or remote control until the image becomes square. • Press "MENU" on the control panel or remote control to open the OSD menu. Go to "Image > Auto Keystone" or "Image > Manual Keystone" to make adjustments.
11	Image is reversed	• Select "Image > Projection" on the OSD and adjust the projection direction.

Problems with the Projector

#	Condition	Solution
1	The projector stops responding to all controls	If possible, turn off the projector, then unplug the power cord and wait at least 30 seconds before reconnecting power.
2	Lamp burns out or makes a popping sound	When the lamp reaches the end of its useful life, it will burn out and may make a loud popping sound. If this happens, the projector will not turn on until the lamp module has been replaced. To replace the lamp, follow the procedures in the "Replacing the Lamp" section.

Downloaded From projector-manual.com Acer Manuals

OSD Messages

#	Condition	Message Reminder
1	Message	Fan Fail - the system fan is not working. Fan Fail. Lamp will automatically turn off soon. Projector Overheated - the projector has exceeded its recommended operating temperature and must be allowed to cool down before it is used. Please also check the dust filters if they are installed. If the dust filter is clogged with dust, please clean it. Projector Overheated. Lamp will automatically turn off soon. Replace the lamp - the lamp is about to reach its maximum lifetime. Prepare to replace it soon. Lamp is approaching the end of its useful life in full power operation. Replacement suggested!

Downloaded From projector-manual.com Acer Manuals

LED & Alarm Definition Listing

LED Messages

Message	Power LED		Lamp LED	Temp LED
	Red	Blue	Red	Red
Standby (Power cord plugged in)	V	--	--	--
Power on	--	V	--	--
Lamp retry	--	Quick flashing	--	--
Turning off (Cooling state)	Quick flashing	--	--	--
Turning off (Cooling completed)	V	--	--	--
Error (Thermal failure)	--	V	--	V
Error (Fan lock failure)	--	V	--	Quick flashing
Error (Lamp breakdown)	--	V	V	--
Error (Color wheel failure)	--	V	Quick flashing	--

Downloaded From projector-manual.com Acer Manuals

Replacing the Lamp

Use a screwdriver to remove the screw(s) from the cover, and then pull out the lamp.

The projector will detect the lamp life itself. It will show you a warning message **"Lamp is approaching the end of its useful life in full power operation. Replacement Suggested!"** When you see this message, change the lamp as soon as possible. Make sure the projector has been cooled down for at least 30 minutes before changing the lamp.

Warning: Lamp compartment is hot! Allow it to cool down before changing lamp!

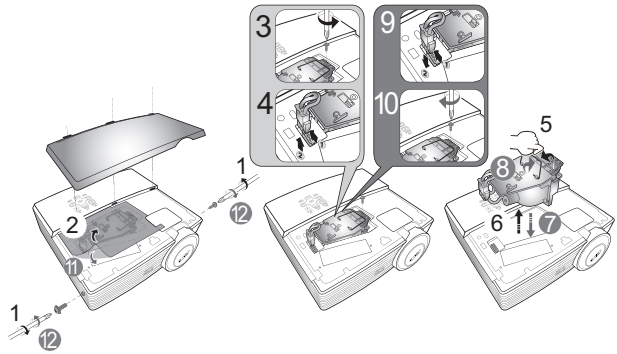

To remove the lamp:

1 Turn the projector off by pressing (POWER).

2 Allow the projector at least 30 mins to cool down.

3 Disconnect the power cord.

4 Use a screwdriver to remove the screws from the cover. (Illustration #1)

5 Push up and remove the cover.

6 Remove and dispose of the lamp protection film (Illustration #2).

7 Remove the screw that secures the lamp module (Illustration #3).

8 Pull out the lamp connector from a slot in the lamp compartment. Disconnect it from the projector (Illustration #4).

9 Lift the handle so that it stands up (Illustration #5). Pull out the lamp module by force (Illustration #6).

To replace the lamp module, use a new lamp and follow illustrations #❼ - #⓬.

Warning: To reduce the risk of personal injury, do not drop the lamp module or touch the lamp bulb. The bulb may shatter and cause injury if it is dropped.

Downloaded From projector-manual.com Acer Manuals

Ceiling Mount Installation

If you wish to install the projector using a ceiling mount, please refer to the steps below:

1 Drill four holes into a solid, structurally sound part of the ceiling, and secure the mount base.

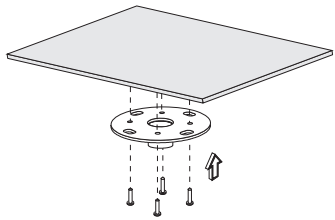

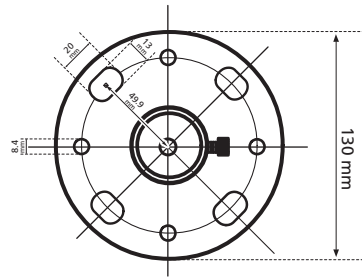

Note: Screws are not included. Please obtain the appropriate screws for your type of ceiling.

2 Secure the ceiling rod using the appropriate type of cylinder screws.

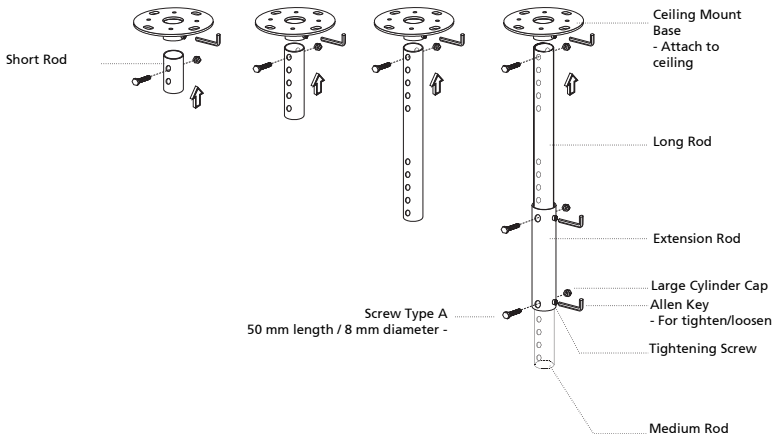

Downloaded From projector-manual.com Acer Manuals

3 Use the appropriate number of screws for the projector size to attach the projector to the ceiling mount bracket.

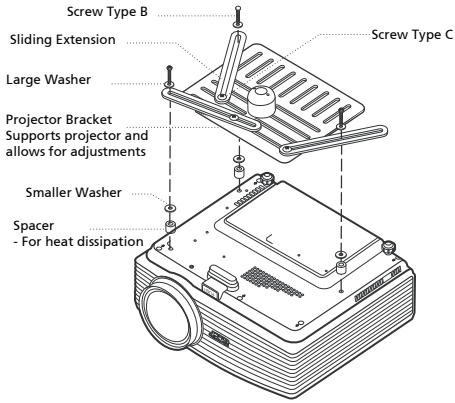

Note: It is recommended that you keep a reasonable space between the bracket and the projector to allow for proper heat distribution. Use two washers for extra support, if deemed necessary.

4 Attach the ceiling bracket to the ceiling rod.

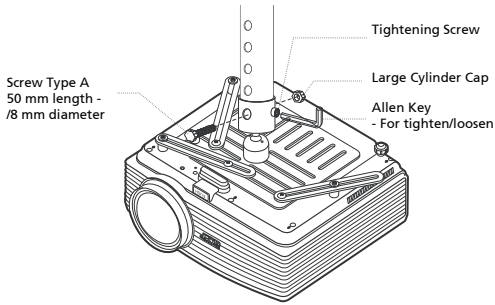

Downloaded From projector-manual.com Acer Manuals

5 Adjust the angle and positioning as necessary.

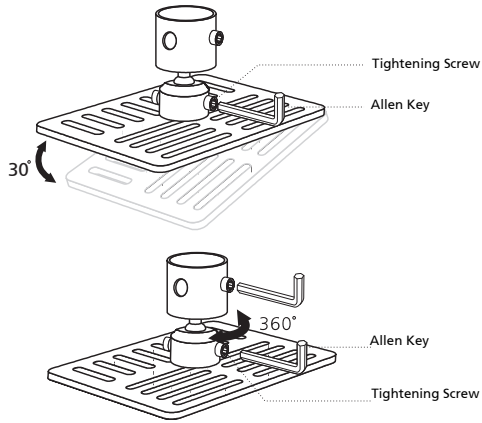

Note: The appropriate type of screw and washer for each model is listed in the table below. 3 mm diameter screws are enclosed in the screw pack.

Models	Screw Type B		Washer Type	
	Diameter (mm)	Length (mm)	Large	Small
P5206/N216/PN-X14/ S5201/T111/PS-X11/S5201B/ T111E/PS-X11K/S5301WB/ T121E/PS-W11K	3	25	V	V

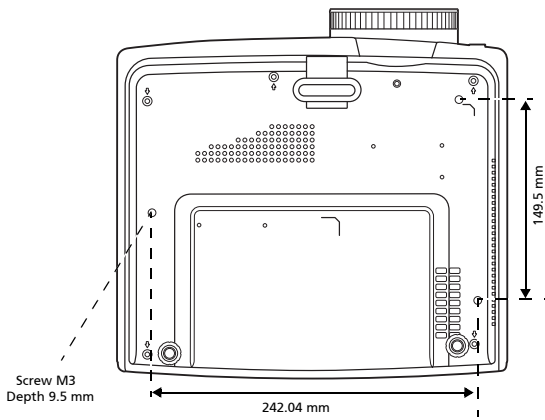

Downloaded From projector-manual.com Acer Manuals

Specifications

The specifications below are subject to change without notice. For final specs, please refer to Acer's marketing documentation.

Projection system	DLP™
Resolution	• P5206/N216/PN-X14/S5201/T111/PS-X11/S5201B/T111E/PS-X11K: Native: XGA (1024 x 768) Maximum: 1920 x 1080 EIA/RB • S5301WB/T121E/PS-W11K: Native: WXGA (1280 x 800) Maximum: 1920 x 1080 EIA/RB
Computer compatibility	IBM PC and compatibles, Apple Macintosh, iMac and VESA standards: WXGA+ (1440 x 900), WXGA (1280 x 800, 1280 x 768), SXGA (1152 x 864, 1280 x 1024), SXGA+ (1400 x 1050), XGA (1024 x 768), SVGA (800 x 600), VGA (640 x 480), UXGA (1600 x 1200), 1920 x 1080 EIA/RB
Video compatibility	NTSC (3.58/4.43), PAL (B/D/G/H/I/M/N), SECAM (B/D/G/K/K1/L), HDTV (720p, 1080i, 1080p), EDTV (480p, 576p), SDTV (480i, 576i)
Aspect ratio	• P5206/N216/PN-X14/S5201/T111/PS-X11/S5201B/T111E/PS-X11K: Auto, 4:3 (native), 16:9 • S5301WB/T121E/PS-W11K: Auto, Full (native), 16:9, 4:3, L.Box
Displayable colors	1.07 billion colors
Projection lens	• P5206/N216/PN-X14: F = 2.59 - 2.87, f = 16.88 mm - 21.88 mm, 1:1.3 Manual Zoom and Manual Focus • S5201/T111/PS-X11/S5201B/T111E/PS-X11K: F = 2.6, f = 6.90 mm, Manual Focus • S5301WB/T121E/PS-W11K: F = 2.6, f = 6.90 mm, Manual Focus
Projection screen size (diagonal)	• P5206/N216/PN-X14: 30" (76 cm) - 300" (762 cm) • S5201/T111/PS-X11/S5201B/T111E/PS-X11K: 40" (102 cm) - 300" (762 cm) • S5301WB/T121E/PS-W11K: 47" (120 cm) - 300" (762 cm)
Projection distance	• P5206/N216/PN-X14: 3.9' (1.2 m) - 30.2' (9.2 m) • S5201/T111/PS-X11/S5201B/T111E/PS-X11K: 1.6' (0.5 m) - 12.2' (3.7 m) • S5301WB/T121E/PS-W11K:1.6' (0.5 m) - 10.4' (3.2 m)
Throw ratio	• P5206/N216/PN-X14: 65" @ 2 m (1.51 - 1.97 : 1) • S5201/T111/PS-X11/S5201B/T111E/PS-X11K: 77" @ 95 cm (0.61 : 1) • S5301WB/T121E/PS-W11K: 87" @ 92 cm (0.49 : 1)
Horizontal scan rate	31 - 100 kHz
Vertical refresh scan rate	48 - 120 Hz

Downloaded From projector-manual.com Acer Manuals

Lamp type	• P5206/N216/PN-X14: Philips 300 W user-replaceable UHP • S5201/T111/PS-X11/S5201B/T111E/PS-X11K/S5301WB/ T121E/PS-W11K: Philips 230 W user-replaceable VIP
Keystone correction	+/-40 Degrees (Vertical), Manual
Digital zoom	2 X
Audio	5 W x 2
Weight	• P5206/N216/PN-X14: Approximate 3.25 kg (7.12 lbs.) • S5201/T111/PS-X11/S5201B/T111E/PS-X11K/S5301WB/ T121E/PS-W11K: Approximate 3.5 kg (7.72 lbs.)
Dimensions (W x D x H)	• P5206/N216/PN-X14: 290 x 255 x 125 mm (11.4" x 10.0" x 4.9") • S5201/T111/PS-X11/S5201B/T111E/PS-X11K/S5301WB/ T121E/PS-W11K: 290 x 254 x 98.5 mm (11.4" x 10.0" x 3.9")
Power supply	Universal AC input 100 - 240 V, input frequency 50/60 Hz
Power consumption	• P5206/N216/PN-X14: 447 W • S5201/T111/PS-X11/S5201B/T111E/PS-X11K/S5301WB/ T121E/PS-W11K: 352 W
Operating temperature	0°C to 35°C / 32°F to 95°F
I/O connectors	• Power socket x 1 • RS232 x 1 • VGA input x 2 • VGA output x 1 • Composite video x 1 • S-Video x 1 • 3.5 mm audio jack input x 2 • 3.5 mm audio jack output x 1 • HDMI x 2 • RJ45 LAN input x 1 • USB (Type mini B) x 1 • 12 V DC output x 1 (Max. 1A) • Microphone input x 1 Below items are for S5201B/T111E/PS-X11K/S5301WB/ T121E/PS-W11K only. • USB (Type A) x 2

Downloaded From projector-manual.com Acer Manuals

Standard package contents	• AC power cord x 1 • VGA cable x 1 • Remote control x 1 • Battery x 2 (for the remote control) • User's guide (CD-ROM) x 1 • Quick start guide x 1 • Security card x 1 • Composite video cable x 1 • Carrying case x 1 Below items are for S5201B/T111E/PS-X11K/S5301WB/ T121E/PS-W11K only. • Acer Projector Gateway (CD-ROM) x 1 • Acer Projector Gateway quick start guide x 1
Accessory (optional)	• Dust filter x 1

*Design and specifications are subject to change without notice.

Downloaded From projector-manual.com Acer Manuals

Compatibility Modes

1 VGA Analog - PC Signal

Mode	Resolution	V.Frequency [Hz]	H.Frequency [KHz]
VGA_60	640 x 480	59.940	31.469
VGA_72		72.809	37.861
VGA_75		75.000	37.500
VGA_85		85.008	43.269
VGA_70	720 x 400	70.087	31.469
VGA_85		85.039	37.927
SVGA_56	800 x 600	56.250	35.156
SVGA_60		60.317	37.879
SVGA_72		72.188	48.077
SVGA_75		75.000	46.875
SVGA_85		85.061	53.674
XGA_60	1024 x 768	60.004	48.363
XGA_70		70.069	56.476
XGA_75		75.029	60.023
XGA_85		84.997	68.677
SXGA_70	1152 x 864	70.012	63.851
SXGA_75		75.000	67.500
SXGA_85		84.990	77.094
SXGA_60	1280 x 1024	60.020	63.981
SXGA_72		72.000	76.970
SXGA_75		75.025	79.976
SXGA_85		85.024	91.146
QuadVGA_60	1280 x 960	60.000	60.000
QuadVGA_75		75.000	75.000
SXGA+_60	1400 x 1050	59.978	65.317
UXGA_60	1600 x 1200	60.000	75.000
Mac G4	640 x 480@60Hz	59.940	31.469
MAC13	640 x 480@67Hz	66.667	35.000
Mac G4	800 x 600@60Hz	60.317	37.879
MAC16	832 x 624@75Hz	74.546	49.722
Mac G4	1024 x 768@60Hz	60.004	48.363

Downloaded From projector-manual.com Acer Manuals

MAC19	1024 x 768@75Hz	75.020	60.241
MAC21	1152 x 870@75Hz	75.061	68.681
WXGA_60	1280 x 768	59.870	47.776
WXGA_75		74.893	60.289
WXGA_85		84.837	68.633
WXGA_60	1280 x 720	60.000	45.000
WXGA_60	1280 x 800	59.810	49.702
WXGA_120*		119.909	101.563
WXGA+_60	1440 x 900	59.887	55.935
1680 x 1050_60	1680 x 1050	59.954	65.290
1920 x 1080_RB	1920 x1080	60.000	66.587
1920 x 1080_EIA	1920 x1080	60.000	67.500
acer_16:9	1366 x 768	59.790	47.712
acer_timing	1024 x 600	60.000	37.500
VGA_120	640 x 480	119.518	61.910
SVGA_120	800 x 600	119.854	77.425
XGA_120	1024 x 768	119.804	98.958

- *** (star sign): For S5301WB/T121E/PS-W11K only**

2 DVI-D & HDMI (HDCP) Timing

Mode	Resolution	V.Frequency [Hz]	H.Frequency [KHz]
VGA_60	640 x 480	59.940	31.469
VGA_72		72.809	37.861
VGA_75		75.000	37.500
VGA_85		85.008	43.269
VGA_70	720 x 400	70.087	31.469
VGA_85		85.039	37.927
SVGA_56	800 x 600	56.250	35.156
SVGA_60		60.317	37.879
SVGA_72		72.188	48.077
SVGA_75		75.000	46.875
SVGA_85		85.061	53.674
XGA_60	1024 x 768	60.004	48.363
XGA_70		70.069	56.476
XGA_75		75.029	60.023
XGA_85		84.997	68.677

Downloaded From projector-manual.com Acer Manuals

SXGA_70	1152 x 864	70.012	63.851
SXGA_75		75.000	67.500
SXGA_85	1152 x 864	84.990	77.094
SXGA_60	1280 x 1024	60.020	63.981
SXGA_72		72.000	76.970
SXGA_75		75.025	79.976
SXGA_85		85.024	91.146
QuadVGA_60	1280 x 960	60.000	60.000
QuadVGA_75		75.000	75.000
SXGA+_60	1400 x 1050	59.978	65.317
UXGA_60	1600 x 1200	60.000	75.000
Mac G4	640 x 480@60Hz	59.940	31.469
MAC13	640 x 480@67Hz	66.667	35.000
Mac G4	800 x 600@60Hz	60.317	37.879
MAC16	832 x 624@75Hz	74.546	49.722
Mac G4	1024 x 768@60Hz	60.004	48.363
MAC19	1024 x 768@75Hz	75.020	60.241
MAC21	1152 x 870@75Hz	75.061	68.681
WXGA_60	1280 x 768	59.870	47.776
WXGA_75		74.893	60.289
WXGA_85		84.837	68.633
WXGA_60	1280 x 720	60.000	45.000
WXGA_60	1280 x 800	59.810	49.702
WXGA_120*		119.909	101.563
WXGA+_60	1440 x 900	59.887	55.935
1680x1050_60	1680 x 1050	59.954	65.290
1920x1080_RB	1920 x1080	60.000	66.587
1920x1080_EIA	1920 x1080	60.000	67.500
acer_16:9	1366 x 768	59.790	47.712
acer_timing	1024 x 600	60.000	37.500
VGA_120	640 x 480	119.518	61.910
SVGA_120	800 x 600	119.854	77.425
XGA_120	1024 x 768	119.804	98.958
480p	Video (HDMI)	60	31.47
576p		50	31.25
720p_60		60	45.00

Downloaded From projector-manual.com Acer Manuals

720p_50		50	37.50
1080i_60		60	33.75
1080i_50		50	28.13
1080p		60	67.5
1080P		50	56.26
1080p		24	27.00
1080p		23.98	26.97

- *** (star sign): For S5301WB/T121E/PS-W11K only**

3 Component Signal

Mode	Resolution	V.Frequency [Hz]	H.Frequency [KHz]
480i	720 x 480	59.94	15.73
480p	720 x 480	59.94	31.47
576i	720 x 576	50.00	15.63
576p	720 x 576	50.00	31.25
720p	1280 x 720	60.00	45.00
720p	1280 x 720	50.00	37.50
1080i	1920 x 1080	60.00	33.75
1080i	1920 x 1080	50.00	28.13
1080p	1920 x 1080	60.00	67.5
1080p	1920 x 1080	50.00	56.26
1080p	1920 x 1080	24.00	27.00
1080p	1920 x 1080	23.98	26.97

4 Video, S-Video Signal

Video mode	V.Frequency [Hz]	H.Frequency [KHz]	fsc (MHz)
NTSC	60	15.73	3.58
PAL	50	15.63	4.43
SECAM	50	15.63	4.25 or 4.41
PAL-M	60	15.73	3.58
PAL-N	50	15.63	3.58
PAL-60	60	15.73	4.43
NTSC4.43	60	15.73	4.43

Downloaded From projector-manual.com Acer Manuals

Regulations and safety notices

FCC notice

This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Notice: Shielded cables

All connections to other computing devices must be made using shielded cables to maintain compliance with FCC regulations.

Notice: Peripheral devices

Only peripherals (input/output devices, terminals, printers, etc.) certified to comply with the Class B limits may be attached to this equipment. Operation with non-certified peripherals is likely to result in interference to radio and TV reception.

Caution

Changes or modifications not expressly approved by the manufacturer could void the user's authority, which is granted by the Federal Communications Commission, to operate this device.

Operation conditions

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Notice: Canadian users

This Class B digital apparatus complies with Canadian ICES-003.

Downloaded From projector-manual.com Acer Manuals

Remarque à l'intention des utilisateurs canadiens

Cet appareil numérique de la classe B est conforme a la norme NMB-003 du Canada.

Declaration of Conformity for EU countries

Acer hereby, declares that this projector series is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Compliant with Russian regulatory certification

ME61

Radio device regulatory notice

Note: The regulatory information below is for models with wireless LAN and/or Bluetooth only.

General

This product complies with the radio frequency and safety standards of any country or region in which it has been approved for wireless use. Depending on configurations, this product may or may not contain wireless radio devices (such as wireless LAN and/or Bluetooth modules).

Canada — Low-power license-exempt radio communication devices (RSS-210)

a Common information
Operation is subject to the following two conditions:
1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

b Operation in 2.4 GHz band
To prevent radio interference to the licensed service, this device is intended to be operated indoors and installation outdoors is subject to licensing.

Downloaded From projector-manual.com Acer Manuals

List of applicable countries

This device must be used in strict accordance with the regulations and constraints in the country of use. For further information, please contact a local office in the country of use. Please see http://ec.europa.eu/enterprise/rtte/implem.htm for the latest country list.

Downloaded From projector-manual.com Acer Manuals

Acer Incorporated
8F, 88, Sec. 1, Hsin Tai Wu Rd., Hsichih
Taipei Hsien 221, Taiwan

Declaration of Conformity

We,

Acer Incorporated
8F, 88, Sec. 1, Hsin Tai Wu Rd., Hsichih, Taipei Hsien 221, Taiwan
Contact Person: Mr. Easy Lai, e-mail:easy_lai@acer.com.tw

And,

Acer Italy s.r.l
Via Lepetit, 40, 20020 Lainate (MI) Italy
Tel: +39-02-939-921, Fax: +39-02 9399-2913, www.acer.it

Hereby declare that:

Product:	**Projector**
Trade Name:	**Acer**
Model Number:	**QNX1017/QNX1020/QNX1021/QWX1026/N216/PN-X14/T111/ PS-X11/T111E/PS-X11K/T121E/PS-W11K series**
Machine Type:	**P5206/S5201/S5201B/S5301WB series**

Is compliant with the essential requirements and other relevant provisions of the following EC directives, and that all the necessary steps have been taken and are in force to assure that production units of the same product will continue comply with the requirements.

EMC Directive 2004/108/EC as attested by conformity with the following harmonized standards:

-. EN55022, AS/NZS CISPR22, Class B
-. EN55024
-. EN61000-3-2 Class A
-. EN61000-3-3

Low Voltage Directive 2006/95/EC as attested by conformity with the following harmonized standard:

-. EN60950-1

RoHS Directive 2002/95/EC on the Restriction of the Use of certain Hazardous Substances in Electrical and Electronic Equipment

-. The maximum concentration values of the restricted substances by weight in homogenous material are:

Lead	0.1%	Polybrominated Biphenyls (PBB's)	0.1%
Mercury	0.1%	Polybrominated Diphenyl Ethers (PBDE's)	0.1%
Hexavalent Chromium	0.1%	Cadmium	0.01%

Directive 2009/125/EC with regard to establishing a framework for the setting of ecodesign requirements for energy-related product.

Downloaded From projector-manual.com Acer Manuals

Acer Incorporated
8F, 88, Sec. 1, Hsin Tai Wu Rd., Hsichih
Taipei Hsien 221, Taiwan

The standards listed below are applied to the product if built with WLAN module or wireless keyboard and mouse.

R&TTE Directive 1999/5/EC as attested by conformity with the following harmonized standard:

- **Article 3.1(a) Health and Safety**
  -. EN60950-1
  -. EN62311

- **Article 3.1(b) EMC**
  -. EN301 489-1
  -. EN301 489-17

- **Article 3.2 Spectrum Usages**
  -. EN300 328
  -. EN301 893 (Applicable to 5GHz high performance RLAN).

Year to begin affixing CE marking 2010.

Easy Lai

Easy Lai /Manager
Regulation Center, Acer Inc.

Dec. 1, 2010 -
Date

Downloaded From projector-manual.com Acer Manuals

Acer America Corporation
333 West San Carlos St., San Jose
CA 95110, U. S. A.
Tel: 254-298-4000
Fax: 254-298-4147
www.acer.com

Federal Communications Commission Declaration of Conformity

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The following local Manufacturer / Importer is responsible for this declaration:

Product:	DLP Projector
Model Number:	QNX1017/QNX1020/QNX1021/ QWX1026/N216/PN-X14/T111/ PS-X11/T111E/PS-X11K/T121E/ PS-W11K
Machine Type:	P5206/S5201/S5201B/S5301WB series
Name of Responsible Party:	Acer America Corporation
Address of Responsible Party:	333 West San Carlos St. San Jose, CA 95110 U. S. A.
Contact Person:	Acer Representative
Phone No.:	254-298-4000
Fax No.:	254-298-4147

Downloaded From projector-manual.com Acer Manuals